

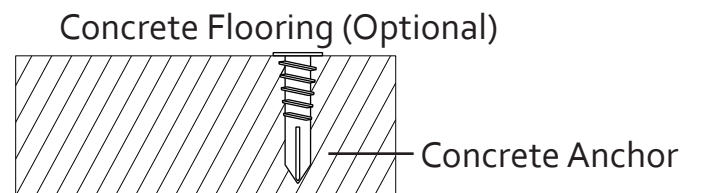
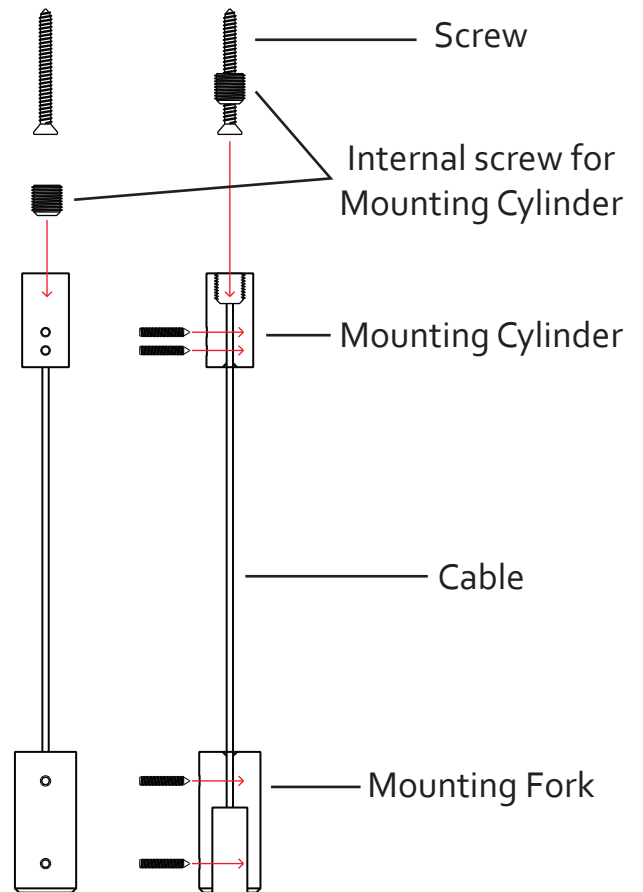


Diagram of parts and components of the Cable System.



The image below shows all of the parts you will receive with your Cable System. Each of the parts are labeled on the previous page.

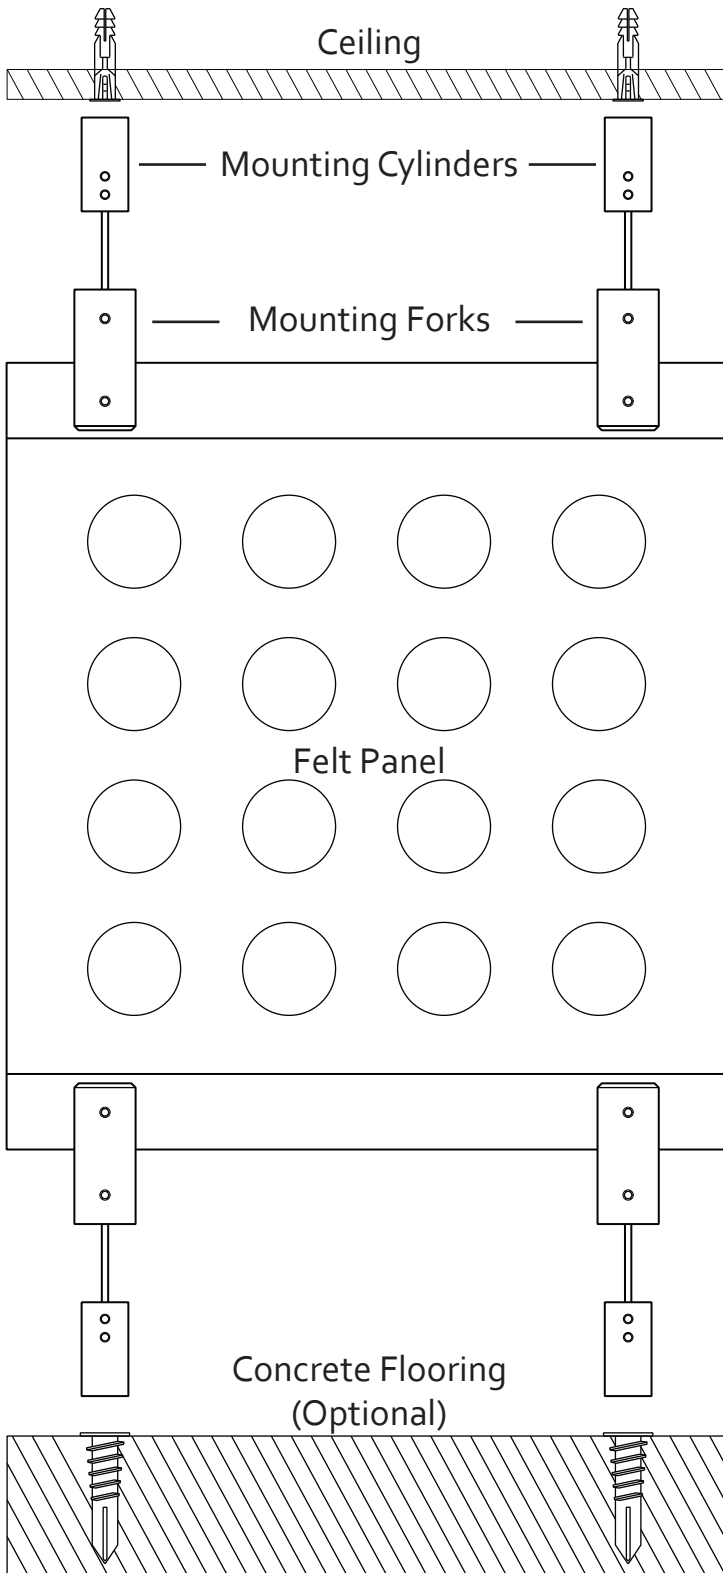

Drilling and attaching Anchors. After locating where you would like to hang your felt panels, you will need to drill and insert the anchors for the cable system.




Inserting Screw and Internal Screw for the Mounting Cylinder.

Use the 5mm allen wrench provided, take the Internal Screw out of the Mounting Cylinder. Place the screw through the Internal Screw.





Insert Screw into the Drywall Anchor. Using a screwdriver, insert the screw and Internal Screw for the Mounting Cylinder into the Drywall anchor.

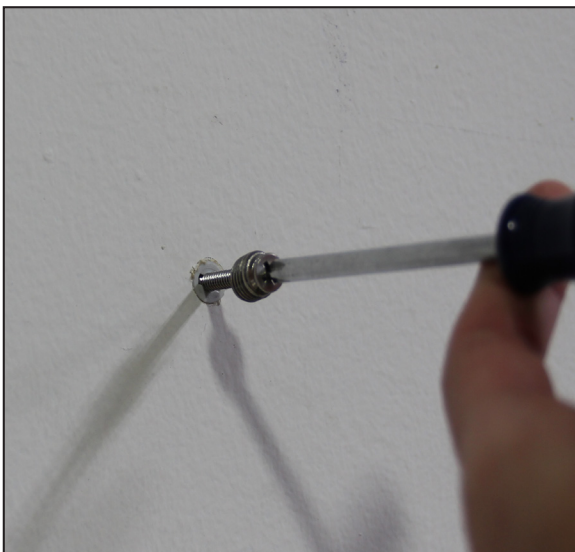

Attaching the Mounting Cylinder. Simply screw the Mounting Cylinder onto the Internal Mounting Screw.




Attaching the Cable. After loosening the locking screws on the sides of the Mounting Cylinder and the Mounting Forks, insert the provided cable. After cutting the cable to the correct length, tighten the locking screws.

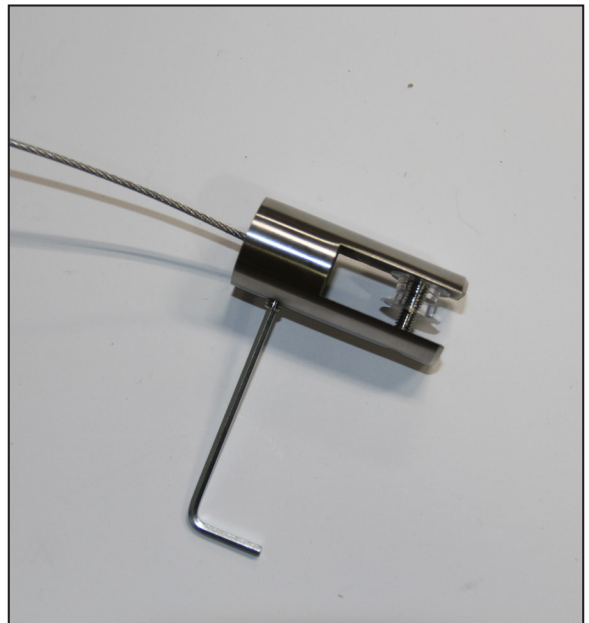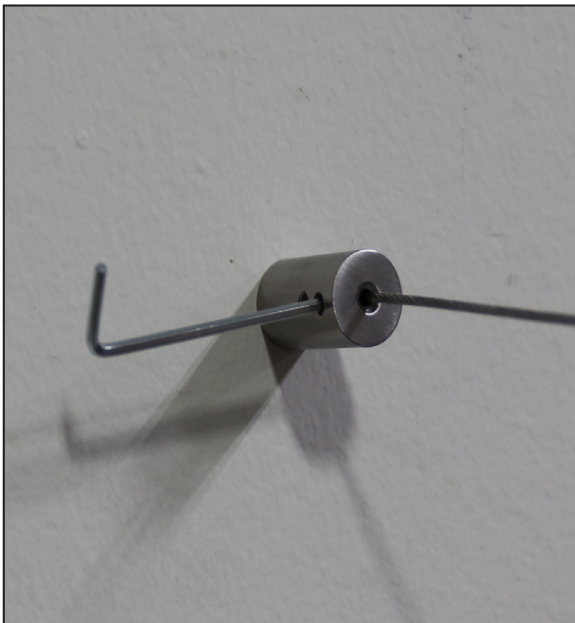

The cable system is now complete. Insert the felt panel into the Mounting Forks and tighten the locking screw.

If needed, repeat the same process for mounting the felt panel to the floor. In this case use the Concrete Anchors. This is an optional choice, and is not need for the cable system to work.

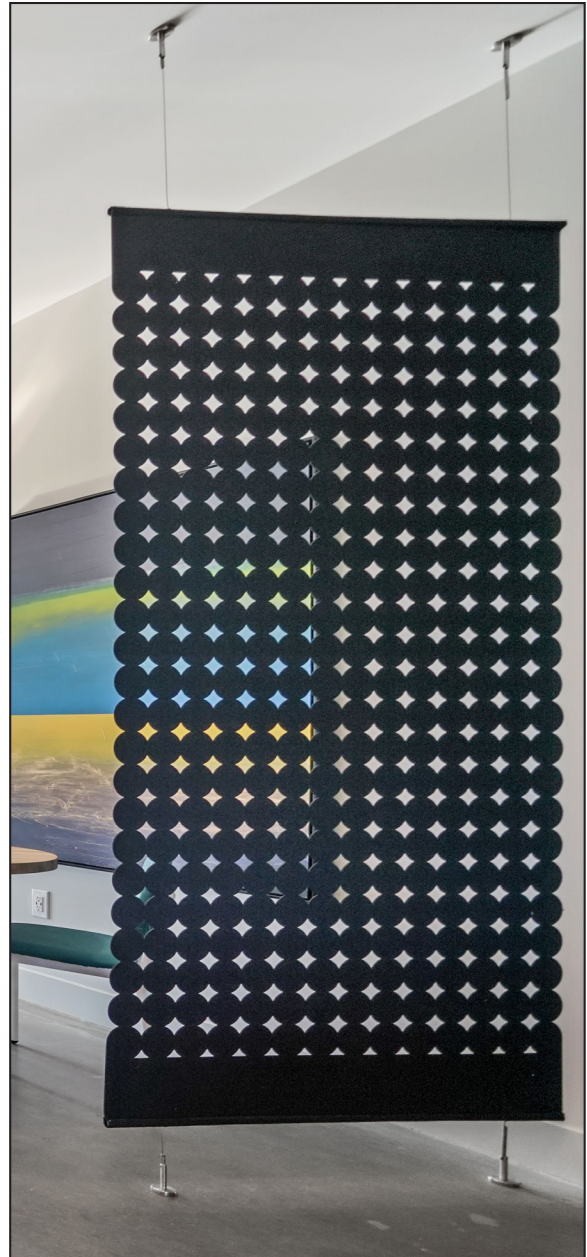

Congratulations, you have finished assembling your new Cable System.